

Wireless Smart Security Fog Machine

MoviSight®

Model MS-SFM-ED



Effect display




Spray After 2 seconds


Features

- Spray Amount: 800 cubic meters/30s 1700 cubic meters/60s
- Spray Interval Time: 5 minutes.
- Spray Time: Appr. 15 sec/time, 4 times at least/ 400c.c.
- Spray Time Setting: 15s/30s/45s/50s settable
- Product Dimension: 435(L)×192(W)×372(H)
- Working Voltage AC 230V/50Hz; AC 240V/50Hz.
- Heating Power: 1000W / at AC 120V; 1150W / at AC 230V
- Preheating Time: 30 min
- Operation Condition: Temperature 0~40°C
humidity <90% RH
- Weight: 25 KG, FCC

Product Appearance

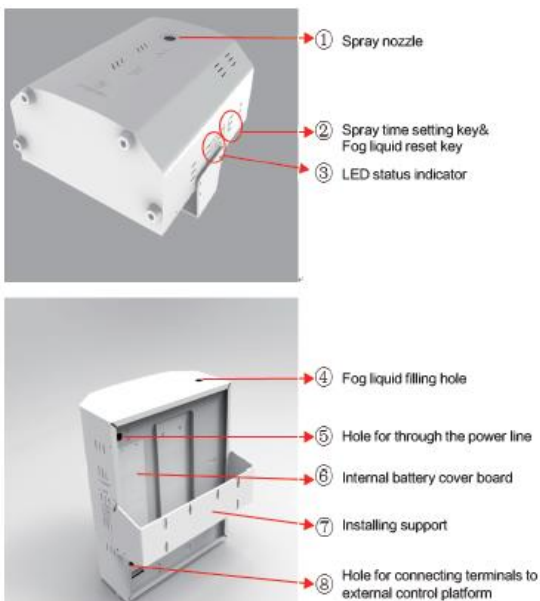

LED & buzzer instructions

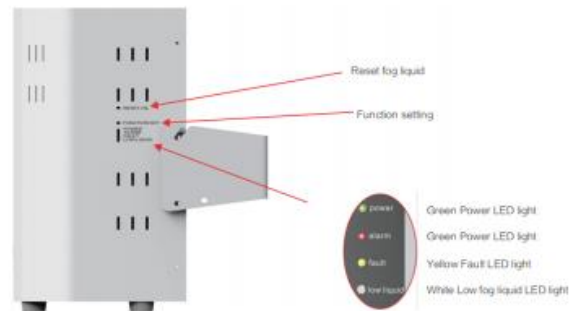

Power LED:

1. Always ON, it indicates the product in monitoring state, it can be triggered and spray fog at any time.
2. Flashing once every 0.5 second, two short warnings every 30 seconds, which indicates the AC power is cut off. At that time, the UPS will supply powder for 30 minutes, in the meantime the product can be triggered to spray fog at any time. But due to heating limitation, this state will maintain only 30-60 minutes after main power cut off.

Alarm LED:

1. Always ON, it indicates the product in heating state, when the machine cannot spray fog; and the heating takes about 30 minutes, when the LED off it can spray and also the product enter anti-theft and monitoring.
2. Flash once every 0.5 second, at spray smog status.

Fault LED:

1. Always on, and buzzer has one short warning every 3 seconds, it means the fog liquid tank switch is pressed down.
2. Flashing once every 0.5 second and buzzer has one long warning every 6 seconds belonging to heating device failure.
3. Flashing once every 2 seconds and buzzer has one short warning every 3 seconds means the cover is not corrected installed.
4. Flashing once every 2 seconds and buzzer has one short warning every 5 seconds is the indication of machine overheating.

Low Liquid LED

1. Always on, and buzzer has a short warning every 5 minutes, it shows the fog liquid is low, please add or replace a new fog liquid in time.
2. Flash once every 0.5 second and buzzer has a long warning and a short warning every 5 minutes that shows fog liquid is used up, please pay attention that by then even if the machine is triggered, it cannot spray fog.

Factory list

S/N	Desp.	Qty.	Remarks
1	Host Machine	1 set	
2	Security Fog Liquid	1200cc	non-toxic and harmless ingredients
3	Bracket	1 pc	for fixing the unit onto the wall
4	Expansion Screws	4 pcs	φ5* φ10
5	Filling Funnel	1 pc	
6	User's Manual	1 pc	

It is recommended to prepare at least 1200cc extra fog liquid for the use of the fog machine.